 


PFTL/PLEDTL TASK LIGHT



Assembly Instructions





FIXTURE PARTS LIST

| | | 24" and 36" | 48" |
|--|-------------------|-------------|-------|
| | Wood Screw | 2 pcs | 3 pcs |
| | Mounting Clip | 2 pcs | 3 pcs |
| | Double Sided Tape | 2 pcs | 3 pcs |



1. Attach two sided tape to mounting clip

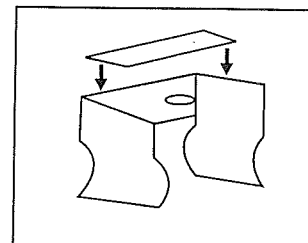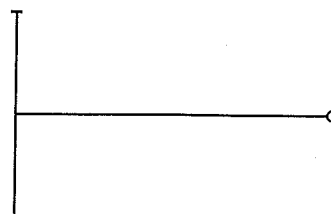



2. Clip mounting clips to light fixture and attach using tape in the desired location

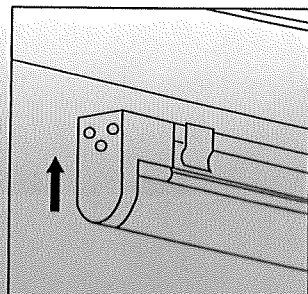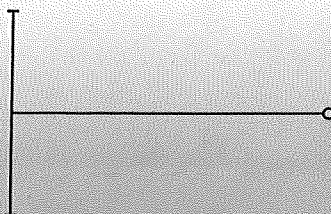

3. If mounting to a wood unit unclip light fixture leaving clips attached to the unit

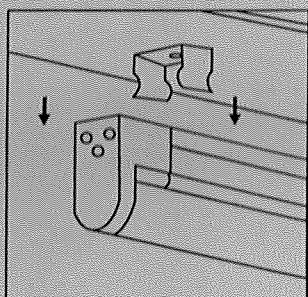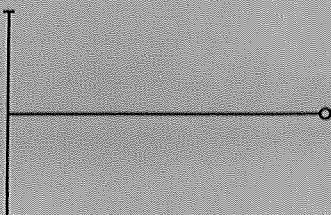

4. Install screws through mounting clips into wood unit

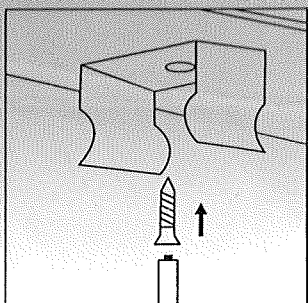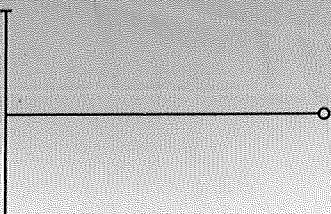

5. Attach cord to light fixture, clip light fixture to the mounting clips

Caution

To reduce the risk of fire or electric shock:
Use only insulated staples or plastic ties to secure cords.
Not intended for recessed ceiling installation or soffits.
Cords should be visible and examined regularly.

Warning

Fixtures are for use in DRY locations only.
DO NOT install over a heat source.
DO NOT install directly over water
Mount a minimum of 12 inches from any object located under fixtures and 1/2" space around fixture
Do not exceed the maximum wattage by connecting more lights than prescribed, or damage may result
Do not cut or splice wiring or the lighting system may be damaged and manufacturer's warranty is voided.

The power cord has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified technician. Never use an extension cord unless the plug can be fully inserted. Do not alter the plug.
Not for use with dimming system or controls.